

FOR YOUR SAFETY

If you smell gas:

1. Shut off gas to the appliance.
2. Open the windows.
3. Don't touch electrical switches
4. Extinguish any open flames.
5. Immediately call your gas supplier.

FOR YOUR SAFETY

DO NOT store or use gasoline or any other flammable vapors and liquids in the vicinity of this, or any other appliance.

**COPPER SCULPTURES, INC.
INSTALLATION
INSTRUCTIONS FOR
WALL MOUNT**

NATURAL GAS



**INDOOR AND/OR OUTDOOR
INSTALLATION**

This lantern must be installed by a certified plumber to conform to local codes or in absence of local codes with the national fuel gas code ANSI Z223.1-1984.

Installation shall be in accordance with CAN1-B149.1, Installation Code Natural Gas Burning Appliances and Equipment.

Threaded parts and screws conform to CSA Standards for Unified Screw Threads B1.1, and Unified Inch Screw Threads ANSI/ASME B1.1.

ATTENTION INSTALLER:

Leave these instructions with appliance so consumer will retain them for future reference.

INSTALLATION INSTRUCTIONS

NOTE: The minimum clearance from combustible construction is 12" top by 6" side.

1. Using mounting hole template (or lantern itself) mark and install 1/4" x 4" lag bolts provided with the fixture. If mounting on brick, stone or stucco, masonry-anchors (not provided with the fixture) may need to be used.
2. Reduce gas supply line from exterior wall to 1/4" copper tubing using approved fittings only.
3. Make a copper coil using 1/4" O.D. copper tubing to allow hook-up of gas supply line to the 1/4" flare (or 3/8") fitting located in the wall mounting box of the lantern. All hook-ups must be made within the width, depth and height of the lantern mounting box.
4. Check for any leaks using a soap solution. If bubbles appear, shut off main gas line and tighten all fittings, then recheck.

WARNING: NEVER USE AN OPEN FLAME TO CHECK FOR LEAKS.


LIGHTING INSTRUCTIONS (Indoor and/or Outdoor Lanterns):

Electronic Ignition:

If an electronic ignition system is being used, it will ignite automatically when the switch is turned on.

Automatic Shut-Off Valves:

1. Open lantern door.
2. Using flame from match or lighter, hold flame over tip of burner.
3. While holding flame over tip of burner, turn gas valve counter-clockwise and then depress button on automatic shut-off valve for approximately one minute, then release.
4. Adjust flame by turning valve to desired position. Bottom of flame should not leave top of burner tip for optimum appearance and wind resistance.

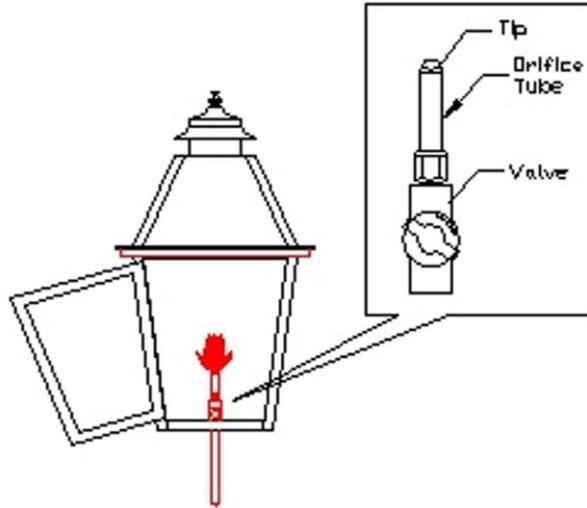

MAINTENANCE INSTRUCTIONS:

1. Check weekly to ensure that appliance area is free of combustible materials. Gasoline or other flammable vapors or liquids should not be stored near lantern.
2. Nothing should obstruct the flow of combustion and ventilation of air.
3. Occasionally the glass will need to be cleaned with household glass cleaner. Turn lantern off and allow cooling before cleaning glass. Burner tip should be visually checked for condition and burn. Clean off deposits and clean the orifice slot if necessary.

SHOULD YOU NEED TECHNICAL ASSISTANCE PLEASE CALL: 1-800-350-5361

Replacement parts may be obtained from:

Copper Sculptures, Inc.

5230 Highway 25

Flowood, MS 39232

Ph. (601) 992-9955

Fax. (601) 992-9350